


Moen Aspire Assembly

You should have:

- 1 base (A)
- 1 triangular shelf (B)
- 3 back panels (C)
- 18 acrylic shelves (D)
- 1 plastic triangle (E)
- 3 wiggly brackets (F)
- 3 screws

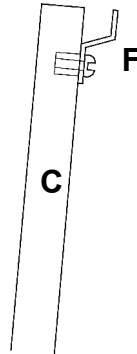

1. Insert screw through hardware bracket (F) and into plastic insert on back side of back panel near the top, as shown above.



Make sure that bracket is installed pointing straight up and tightened just enough to keep it from turning.

2. Place each of the tall panels, wide end at bottom, onto the base panel with the wheels. Tabs go into slots.

3. Lean the panels back into each other, slide the triangular shelf (B) over the tops of all panels and bring it down until it feels snug, making sure that it is level and that edges of all back panels meet together nicely.

4. Take the plastic triangle (E) and fit it over the hardware brackets from the top making sure the brackets slot firmly into the slots in the plastic triangle.

5. Finally, start fitting the acrylic shelves into the slots in the back panels. The acrylic shelves have a funny shape at the back edge, once the shelf is into the slot slide it over a bit so that it can't be removed by anyone casually giving it a tug straight outwards.

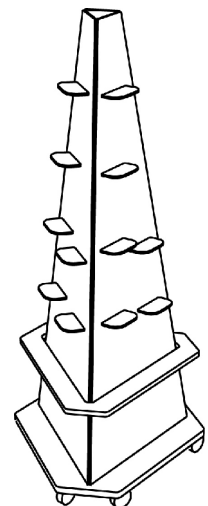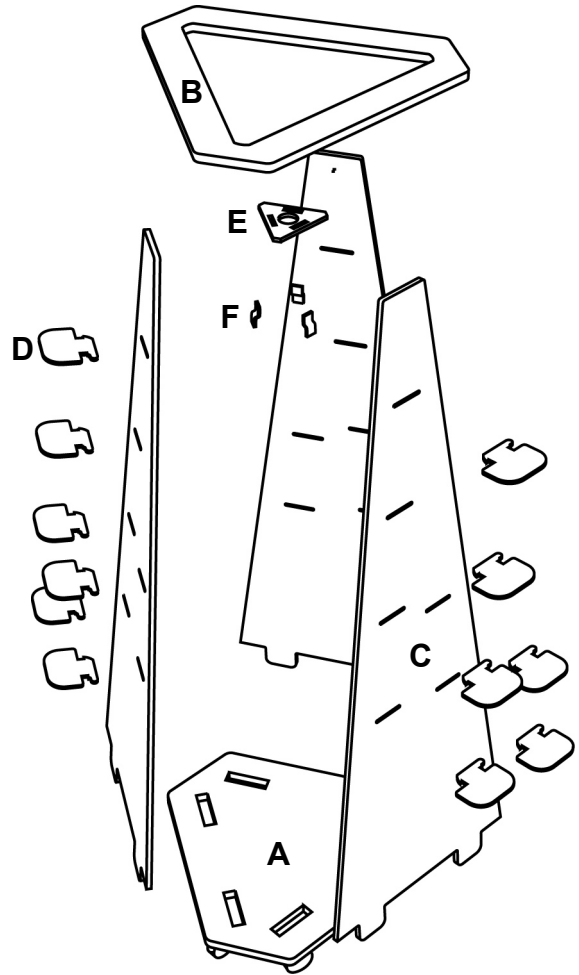

Any problems? We care! 1-877-333-6636 or e mail: moen@planet.eon.net