


Moen Curl Assembly

You should have:

- 2 side panels (**A**)
- 1 back panel (**B**)
- 1 base with wheels (**C**)
- 5 shelves with hooked tabs (**E**)
- 5 shelves with straight tabs (**E**)
- 2 zig zaggy vertical shelf supports (**D**)
- 8 large screws

1. Slide side panels (**A**) onto vertical tabs on back panel (**B**). If the back panel has a textured side it should face forwards. If, in your case, the side panels have a textured side they should face outwards.
2. Place the resulting assembly onto the base (**C**) putting the tabs through the slots on the base, then sliding the assembly backwards to lock tabs into place.
3. Reach below the base to insert screws through the white blocks and into the tabs at the bottom of the side panels and the back panel.
4. Insert vertical shelf supports (**D**).
5. Install shelves (**E**) – note that there are 2 different kinds of shelves, those with hooked tabs and those with straight tabs. The shelves with the hooked tabs go into the frontmost slots, the straight tab shelves will be inserted into the the centermost slots.

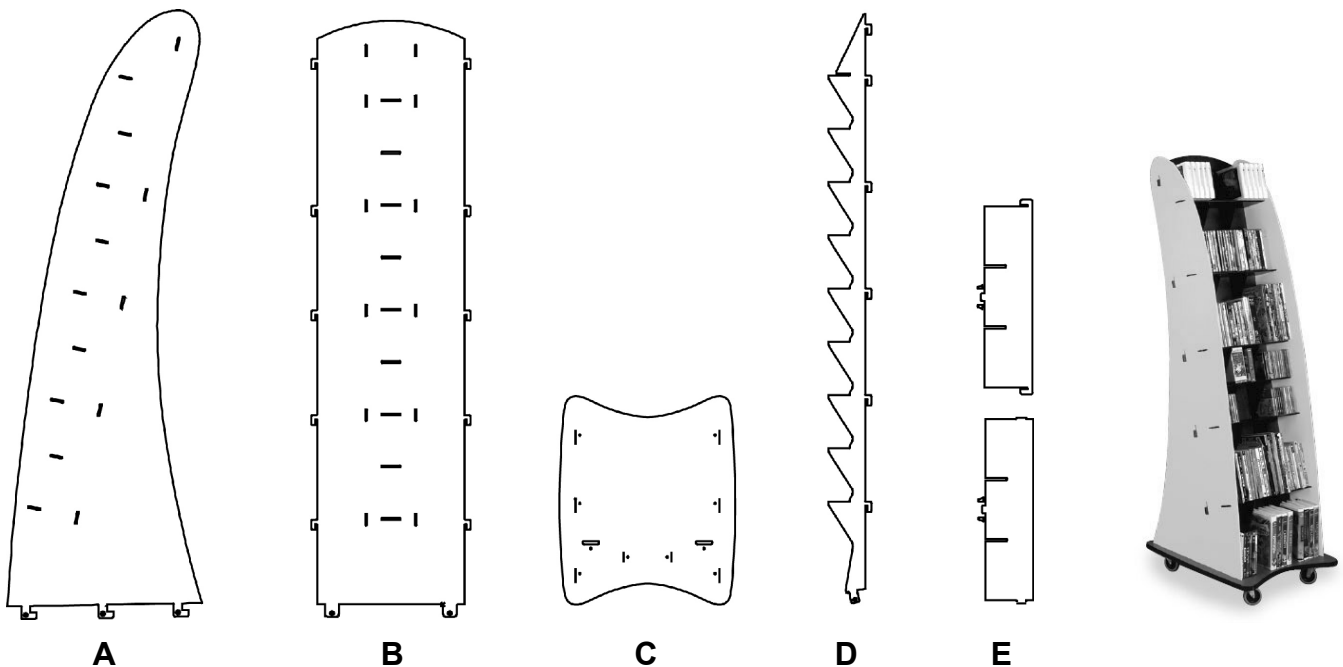

Any problems? We care! 1-877-333-6636 or by e mail: moen@planet.eon.net