


Moen Kismet Assembly

You should have:

- 1 top panel (A)
- 1 bottom panel (B)
- 4 legs (C)
- 6 screws (D)
- 4 large plastic washers (E)
- 1 rectangular grommet (F)

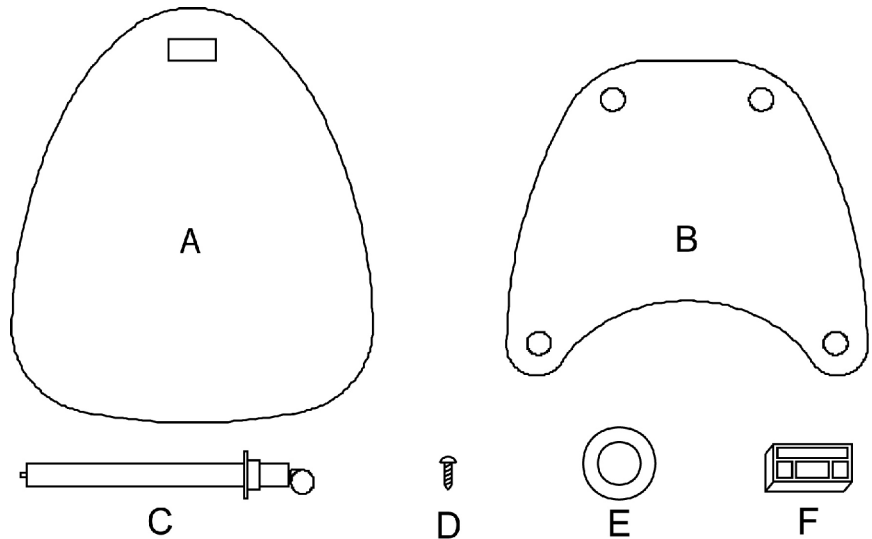

1. Place top (A) face down on a padded surface.
2. Place large plastic washers (E) on top of mounting plates.
3. Place bottom layer (B), also face down on top of mounting plates and washers.
4. Insert legs through leg holes, and screw into mounting plates.
5. Lift bottom layer until it comes in contact with the flanges, insert screws through flanges and into plastic inserts (turn legs to line them up properly).
6. Turn the unit over and Done!



Any problems? We care! 1-877-333-6636 or by e mail: moen@planet.eon.net