

Moen Snap Assembly

Please note that it is the nature of the soft plastic used that light surface scuff marks will show and are even unavoidable in the manufacturing of the product; the advantage to this material is that it will still show its true colour even if it gets chipped, scratched or beaten with time!




You should have:

- 1 rectangular back panel (A)
- 2 long, funny shaped plastic “rails” (B)
- 5 plastic shelves (C)
- 1 plastic spacer piece with “hooks” (D)
- 2 Base sides (E)

1. First, stand the base sides (E) up about 17” apart.
2. Slide spacer piece (D) into the skinny slots on the base sides so that the hooks catch on the outer sides of the base. Make sure that these are inserted far enough so as not to obstruct the slots that the back panel will fit into.
3. Insert the shelves (C) into the slots on the back panel (A). First insert one side tab, then push the other tab towards the center to help it clear, then push the shelf onto the back until it snaps into place.
4. Slide the back panel (A) down into the slots on the base sides (E), with the label at the top, making sure that the holes and slots on the back panel are not obstructed by the base panels, such that the tabs on the rails are free to push through the back panel.
5. Insert the rails (B) as shown below into the back panel with the large hooks at the top going into the top holes. Then angle the rail downwards lining up the slots in the shelves with the slots in the rails as you go. If you have trouble getting the rails to go down then you may have some slots that are not aligned.

6. After the rails are completely inserted pull down on them to “lock” them into place.

Voila!

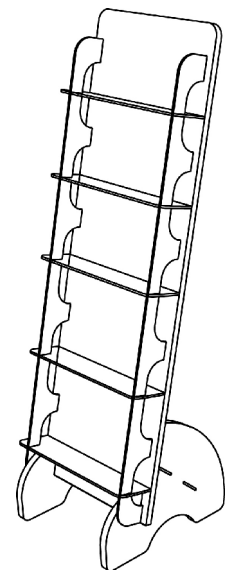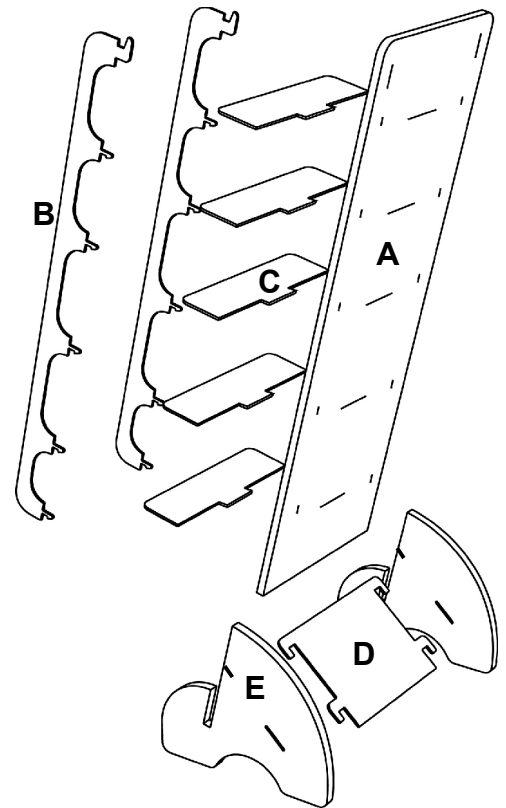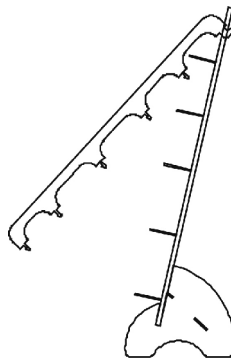

Any problems? We care! 1-877-333-6636 or by e mail:
moen@planet.eon.net