

## Moen Tall Stakx Assembly Instructions

### You should have:

- 1 bottom panel, with casters
- 1 top panel
- 5 shelves (like triangular donuts)
- 12 white angle brackets with black threaded clips
- 6 long silver screws for fastening angle brackets to base panel
- 6 short silver screws for fastening angle brackets to top panel
- 12 black screws for fastening back panels to angle brackets
- 3 black plastic back panels
- 3 tall wooden Supports
- 6 long rods
- 15 short rods

### For Easy assembly follow these instructions - In sequence!

1. Fasten white angle brackets to top and bottom panels with silver screws. Be careful to use the shorter ones for the top panel. A shelf can be used as a guide. (Figure 1)
2. Back panels have labels at the top on the outside (textured side). Be sure that they are right way up. Insert black metal screws through the holes at the bottoms of the 3 back panels into the brackets that are now fastened to the base. The back panels will be floppy at this stage so it is handy to have a second person to help support them for now - **or** - use tape to hold the corners together while you slide the shelves over the back panels.
3. Place 1 wooden support inside the 3 back panels, the black side should face the corner. Place a short rod through the bottom hole of the back panel, then through the wooden support, then through the adjacent back panel (Figure 2). Place the next wooden support in the next corner and do like wise until you have support rods going through all of the bottom row of holes.

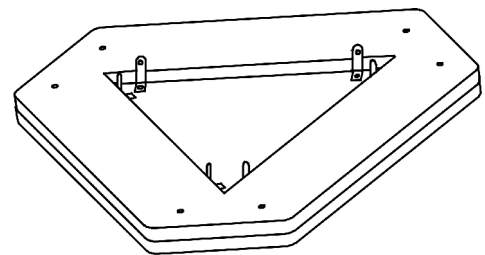


Figure 1


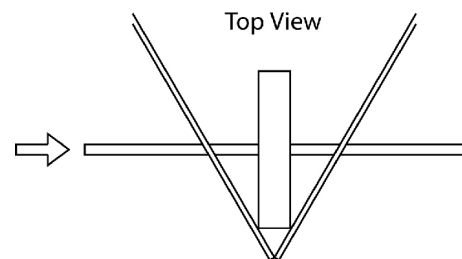


Figure 2

4. Slide the first triangular donut over the back panels and allow to rest on the support rods.
5. Place the next row of support rods through the 2<sup>nd</sup> row of holes (and the wooden support), place the next shelf and so on... Repeat until all four shelves are in place.
6. Insert the 6 long rods down through the holes on the corners of each shelf.
7. Set the top panel into place with the brackets going inside of the 3 back panels and the tops of the long rods resting in the holes in the underside of the top panel. Insert black screws through back panels and into the brackets. Stand back and admire your work. Load up books!

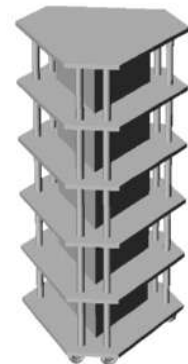

**Any problems? Call us, we care and we can help!**

**1-877-333-6636**

**1-780-469-9770 or email: [lmoen@moendesigns.com](mailto:lmoen@moendesigns.com)**