

Tall Bot Assembly instructions  
**You will need 2 people for this assembly!**




1. Attach stepped plastic piece (**A**) to base with cap screws through white plastic blocks on the under side of base (**B**), lay the unit on its side and insert screws through the blocks on under side of base and into tabs on stepped plastic piece.
2. From largest to smallest, slide shelves(**C**) onto the stepped plastic piece, attach 3/4” thick panel to top.
3. The 10 small ledges (**E**) slide onto the face panels (**F**) with the little hooks sliding towards the center.
4. Stand the unit up (it will be floppy at this stage). Place the face panels (**F**) onto the base with the tabs at bottom extending into the slots on the base. The little ledges should be face out – **make sure that the ledge tabs on the back side are underneath the shelves so as to provide support for the shelves.**
5. Take a side panel (**G**), and lining it up with the first set of top hooks at the sides of the front panels, press the side onto the hooks, repeating for each set of hooks as you go down. Make sure that as you go along the center tabs of the shelves protrude through the side panel slots. Once all hooks are through the slots, pull down on side panels to lock the sides onto the hooks. Fasten the sides to the base and top panels with remaining screws provided.
6. Repeat this procedure with the other side panel.

See diagrams following pages.

Any problems? Call us, we care and we can help!

1-877-333-6636

1-780-469-9770 or email: [lmoen@moendesigns.com](mailto:lmoen@moendesigns.com)

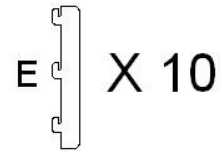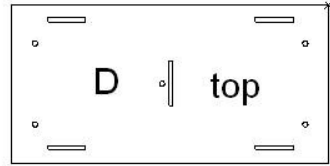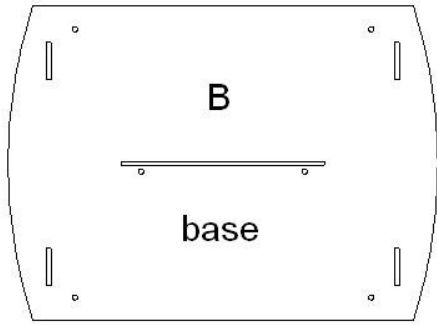

3 cap screws

8 1/4 x 2" screws

